

Item No	Part Name	Quantity	Image
1	Pre Assemble Side Arms	2)
2	Front Bar	2	
3	Corner Bracket	2	
4	Aluminium Inner Tube	1	← → →
5	Joiner	1	000 003 009 UPT HERE WITH CANE D
6	Line Cord (24.5m)	1	
	Bolt Pack (M6 X 32 + Nyloc Nut)	6	((((((((((
	Installation Instruction	1	

TOOLS REQUIRED FOR INSTALLATION

- 8m measuring tape
 - Pencil or marker
 - Hammer
 - Hammer Drill (can hold up to 12mm diameter)
 - · Masonry drill bit
- Scissors
- · Socket or adjustable wrench · Wall anchors (recommended 8mm

 - diameter x 50mm not supplied)
- Spirit level (optional)
 Twist drill (optional)

INSTALLATION INSTRUCTIONS:


Important: Ensure selected location has sufficient side clearances considering wall bracket distance (Actual frame size 1195 Depth x 2240 Width). Allow 80mm minimum clearance on each side of wall brackets to clear fences or walls when folding clothesline up or down. Recommended height position from ground to wall bracket top mounting hole is USER HEIGHT + 100mm


- 1. Mark recommended height position, wall bracket mounting hole (170mm in two places) and centre distance (2220mm) positions.
- Committee (EZEONINI) positions.

 2. Drill 4 x mounting hole positions with 8mm diameter x 50mm minimum depth.


 3. Fasten pre-assembled side arms into the wall with 8mm x 50mm wall anchors (NOTE: Ensure arm in down position, square hole is visible in front edge of the tube for correct orientation).

 4. Pre-assemble two piece front bars identify front bar with hole drilled the furthest from tube end and insert
- 5. Insert aliuminium inner tube inside joiner thru front bar until holes line up and insert bolt, repeat connecting other front bar and insert bolt, affix nuts and tighten.
- 6. Connect corner bracket into front bar ends and insert bolt, affix nut and tighten.

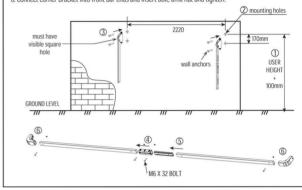



- Hold front bar joiner and lift gently in upward direction until frame is in flat or slight tilting position, push frame into the wall bracket until it hit a hard stop, release bar to lock frame in position.
- Start threading from inner most hole (see Figure 1) and continue up to last hole position, trim off end and leave 100mm minimum excess(see Figure 2).

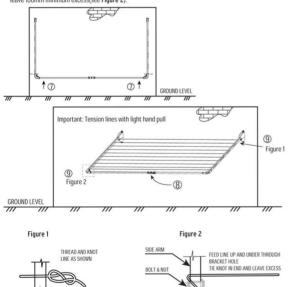


FRONT BAR

OPERATING INSTRUCTIONS:

4

1. From down position, hold joiner and lift in upwards direction until frame is in flat or slight tilting



2. Push frame into wall bracket until it hit a hard stop, release bar to lock frame into position.



SAFETY HINT:

Do not use clothesline other than to hang and dry washing. Ensure clothesline is not used as play item by children swinging or hanging on lines.

5 Year Product Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If any part of this clothesline fails to operate correctly due to workmanship or defective material DryFresh will repair or replace free of cost within 5 years from the date of purchase (Receipt of purchase required). The PVC cord is covered by a 1 year warranty from the date of purchase. Any evidence of misuse or incorrect adjustment will void the warranty. To claim a product warranty, please contact DryFresh directly. You must bear the cost of claiming the warranty. This warranty is in addition to other rights and remedies of the consumer under law.

info@DryFresh.com.au www.DryFresh.com.au